

Presents:




KwikTool[™]

60-second Installation
Step 1: Trim Cable Jacket


1.2 inch



60-second Installation
Step 2: Dress Wires Into Jack

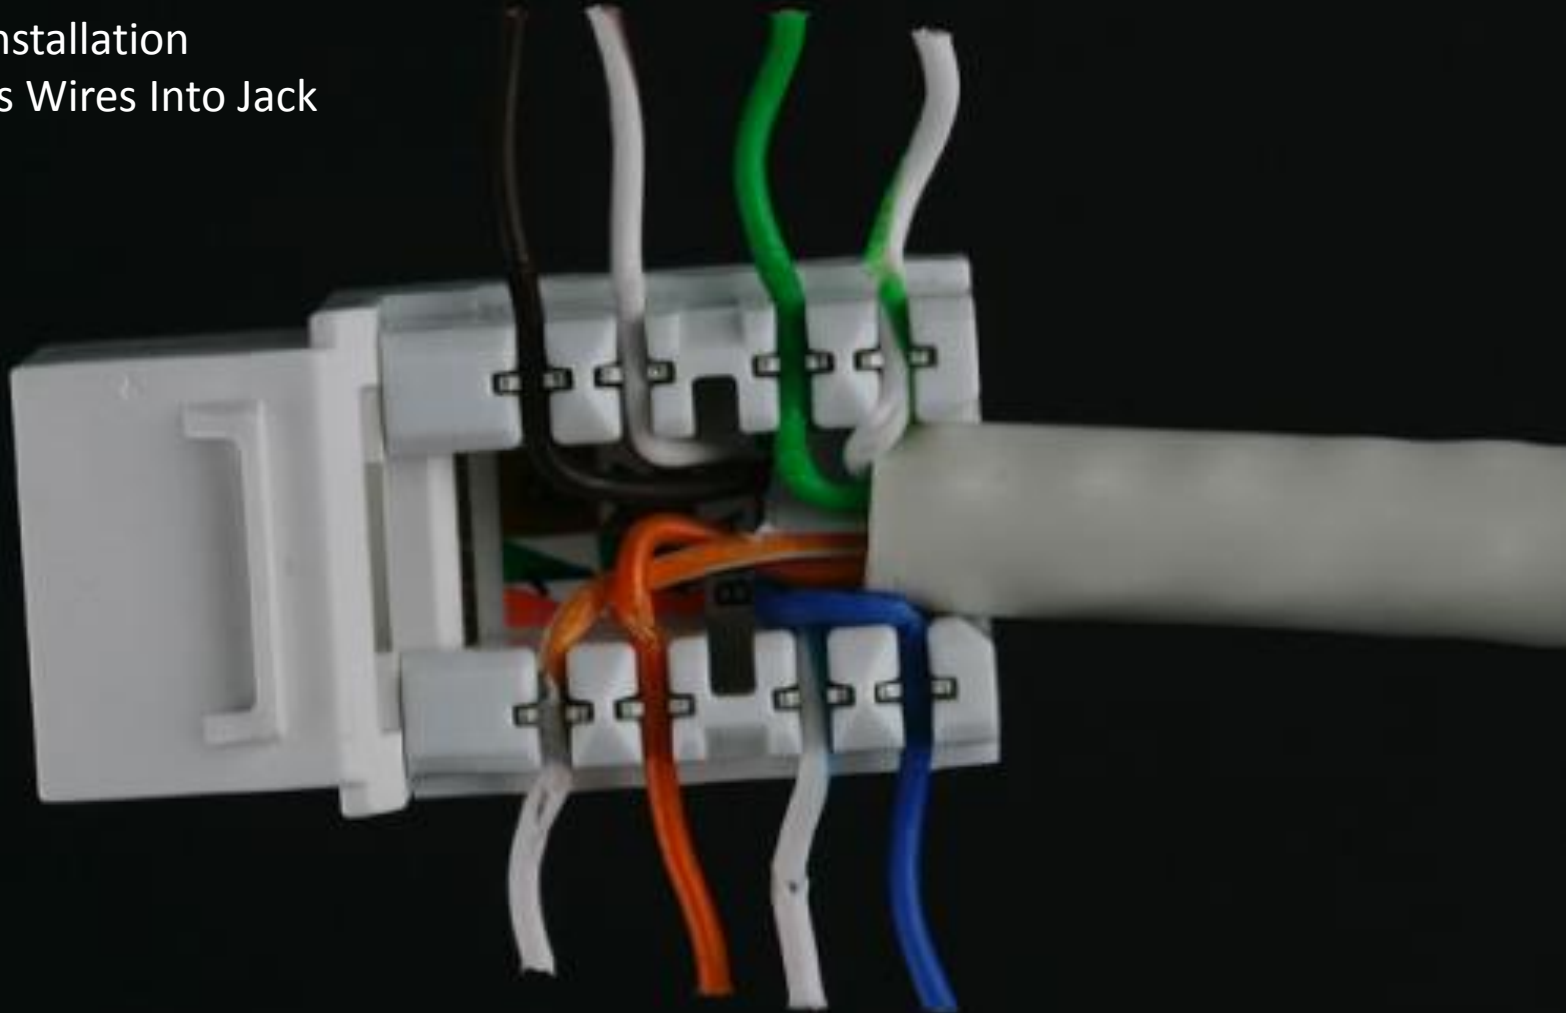

60-second Installation
Step 3: Insert Jack Into KwikTool

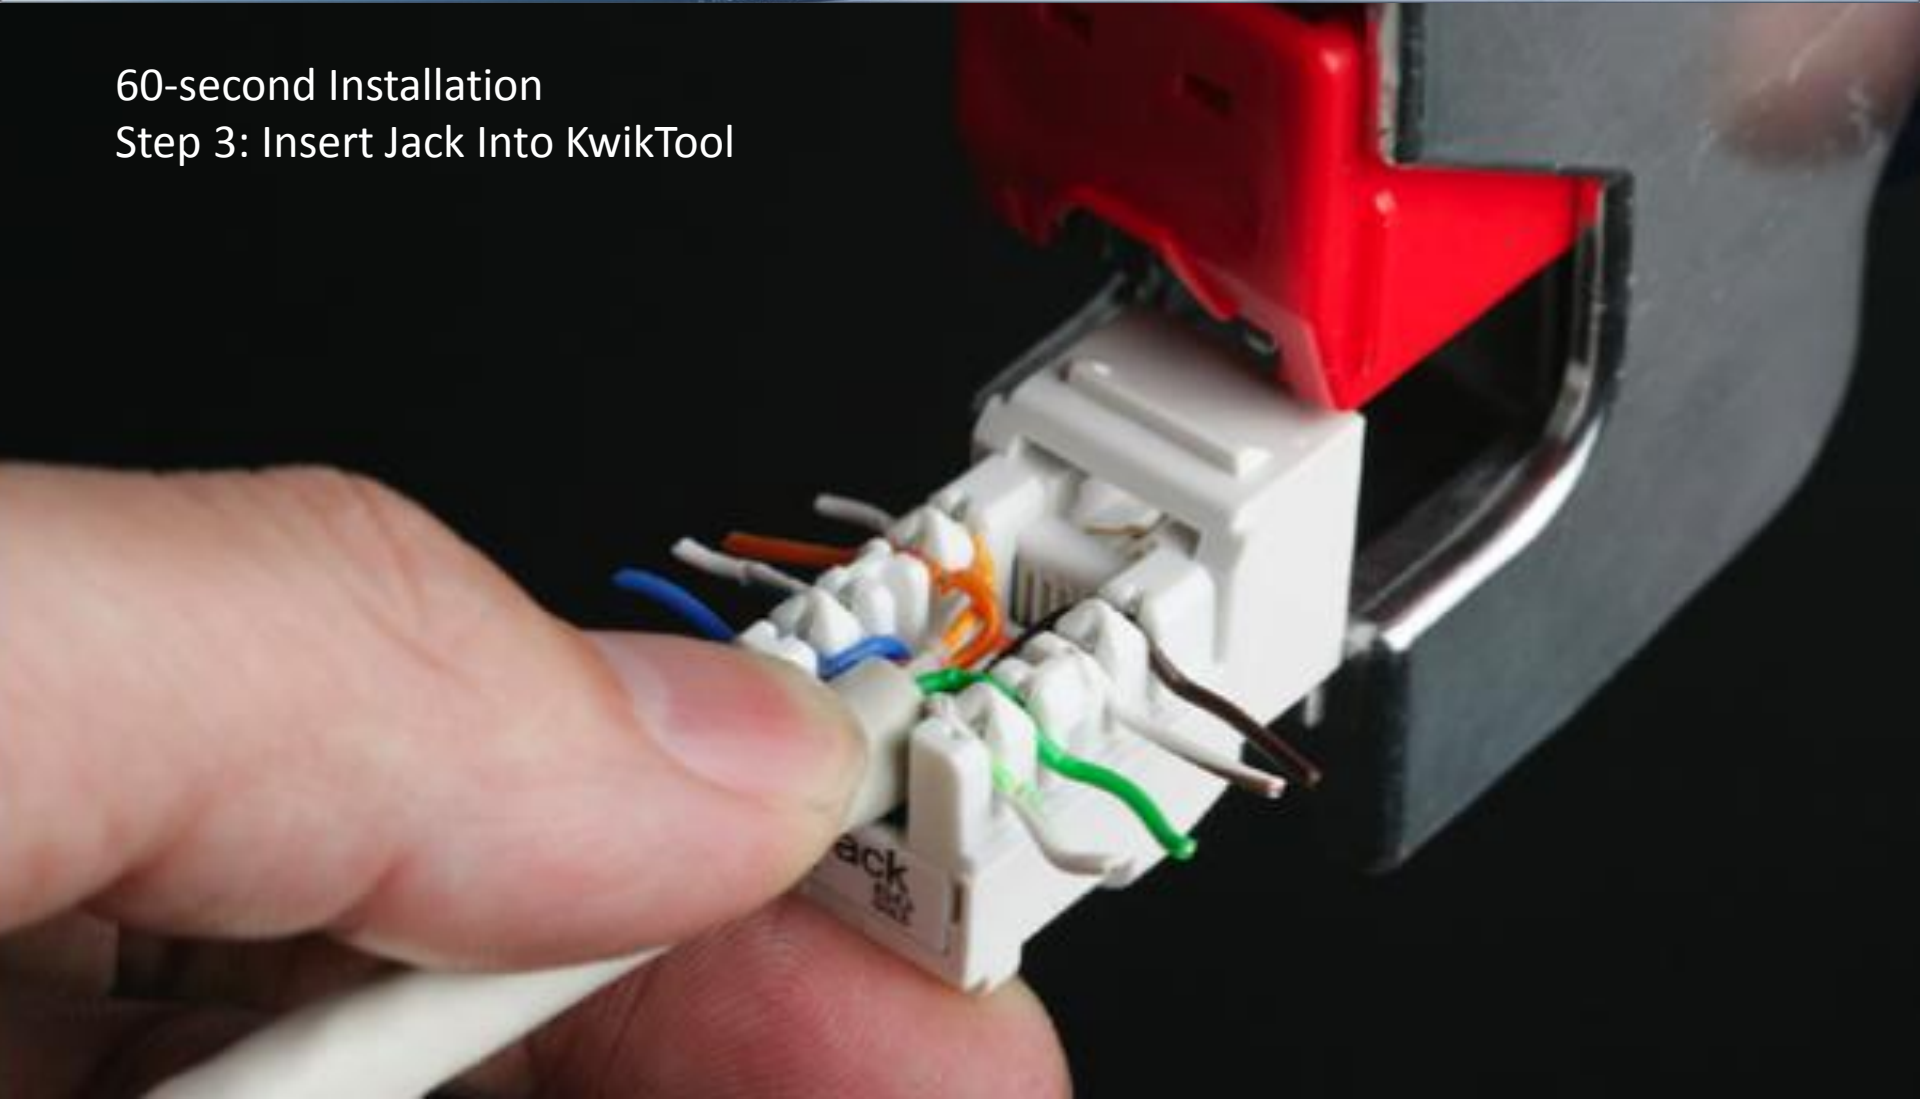


60-second Installation


Step 4: Grasp KwikTool with One Hand



60-second Installation
Step 5: Gently Squeeze

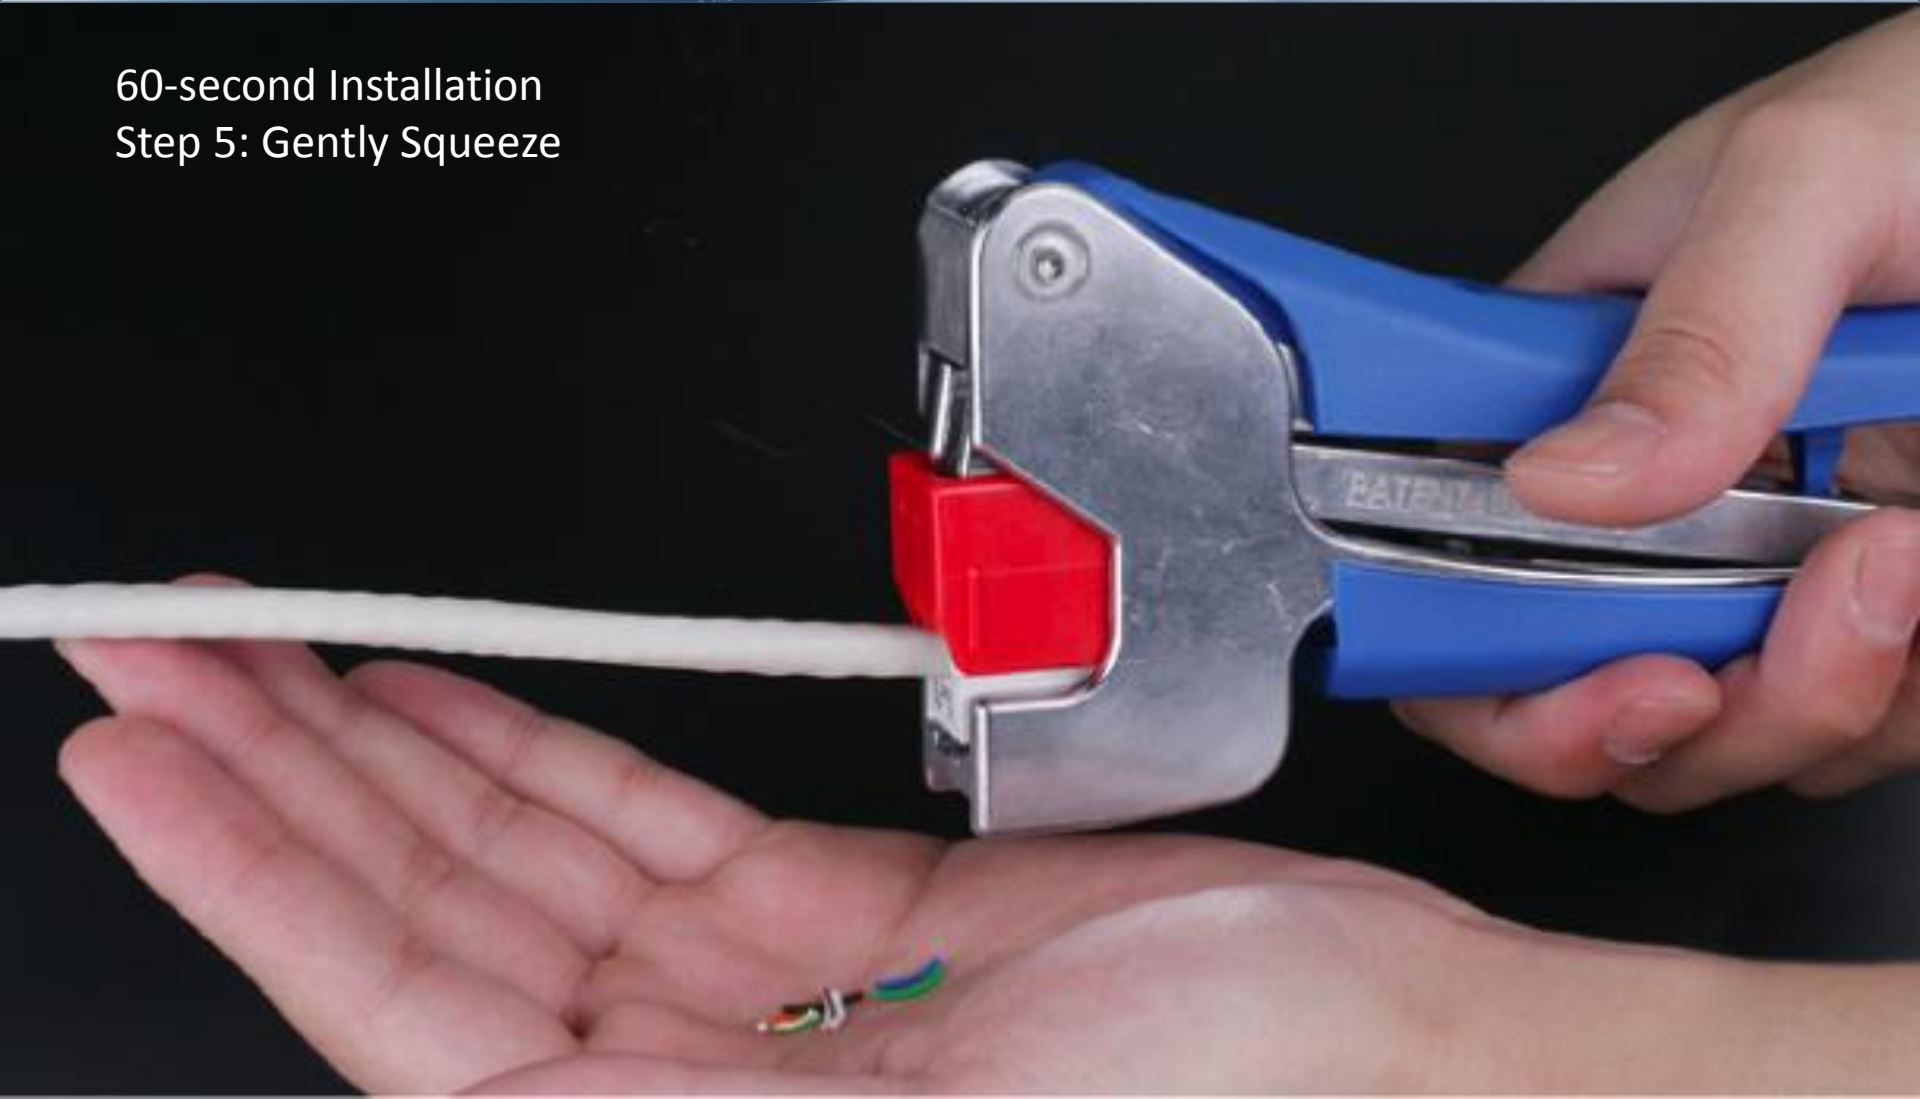

60-second Installation
Step 6: Install Cap

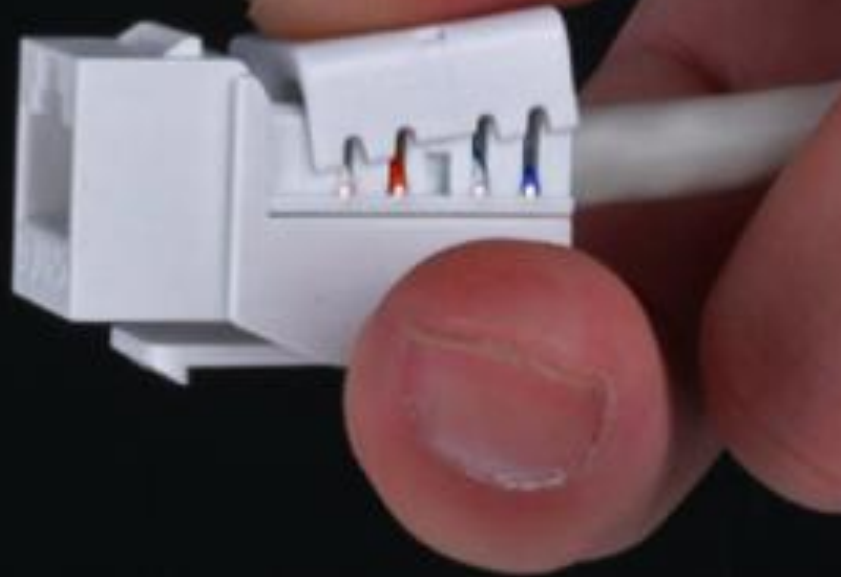



60-second Installation
Success!



Removing Cutting Head



Replacing Cutting Head



Locking Handle for Storage

